


## Murphy Drawer Kit

**Product Features Quality Choice:-**

- New Upgrade and Optimization
- Invisible Dining Table with Drawers
- Space Saving
- High Quality Material
- Bearing 35Kg
- Push and Pull Smooth
- Push and Pull Soft Tone
- Easy to Install
- Anti Rust and Wear Resistant
- Longer Service Life


**Product Details:-**

- Aluminium Alloy + Iron + Plastic
- 4 Section (450-1150mm)
- Set Weight (3.78kg Net & 4.13Kg Gross)
- Bottom Installation Method
- Scope of application for Drawer & Dining Tables

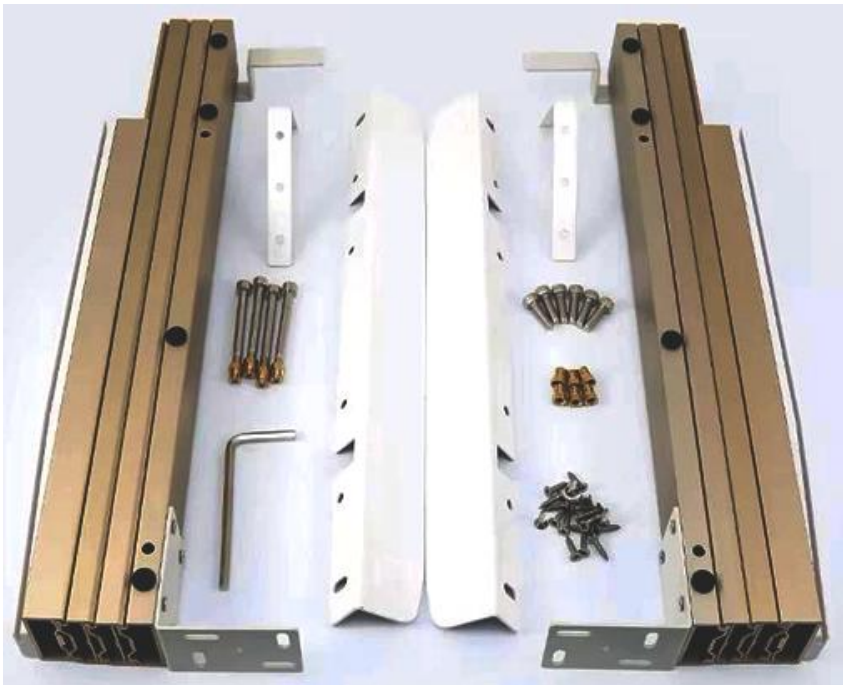



**Product Section Dimensions**

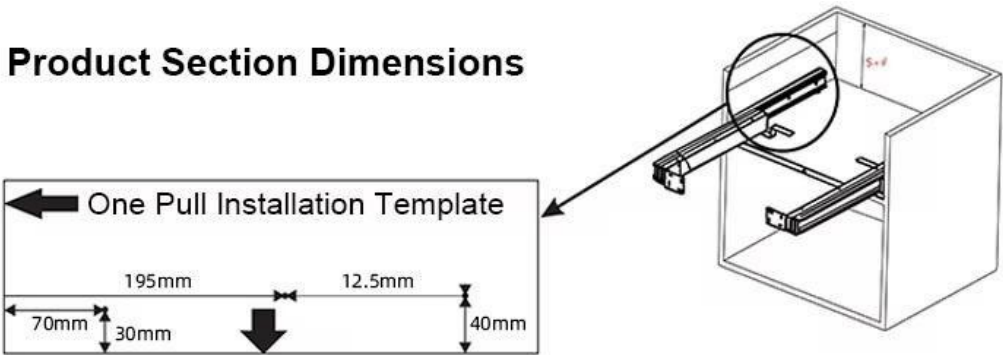


**Installation Suggestion**



- 1: The Track Is Opened According to the Size of the Drawing
- 2: 10mm Is Reserved for Side Panels and Rails
- 3: The Minimum Depth in the Cabinet Is 520mm
- 4: The Minimum Height Inside the Cabinet Is 150mm




## Installation Diagram

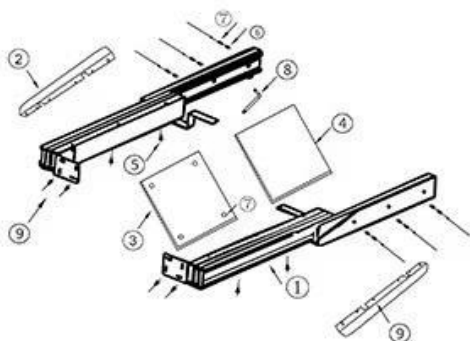

Serial Number	Name	Quantity	Serial Number	Name	Quantity
1	One Pull the Slide Rail	L+R	6	M6×20	6PCS
2	Rail Angle	L+R	7	Copper Expansion Nut	10PCS
3	Fixed Plate	1PCS	8	No. 5 Hex Wrench	1PCS
4	Activity Board	1PCS	9	M4×16	20PCS
5	M6×62	4PCS			

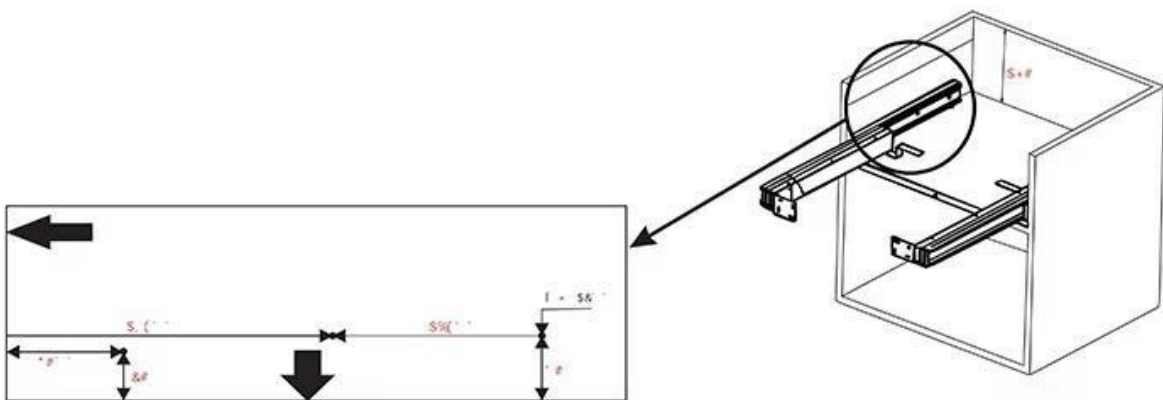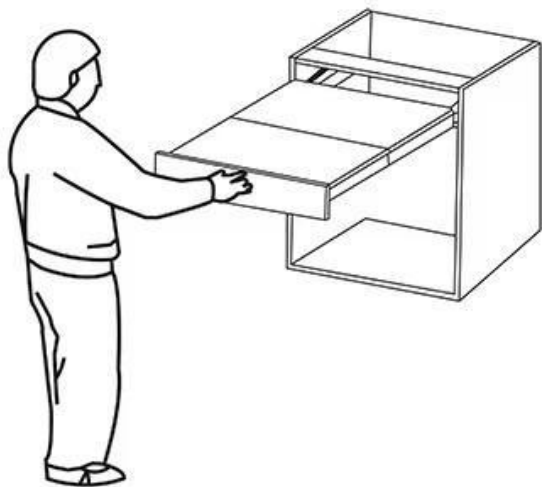


1. The Track Is Opened According to the Size of the Drawing.
2. Side Panels and Rails Are Reserved 10mm.
3. The Minimum Depth in the Cabinet Is 520mm.
4. The Minimum Height Inside the Cabinet Is 150mm.

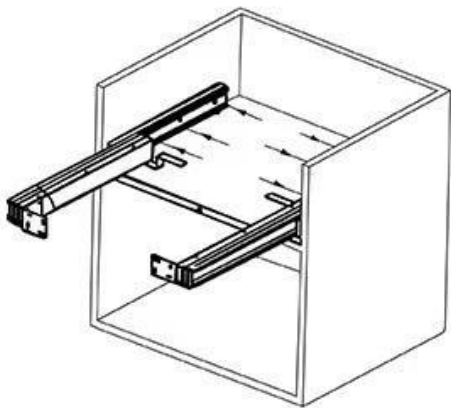

1. After Drilling the Pre-Hole on the Side Plate Knock in the Explosion Nut, And Then Install the Screw
2. Follow the Schematic Diagram.


Installation.2

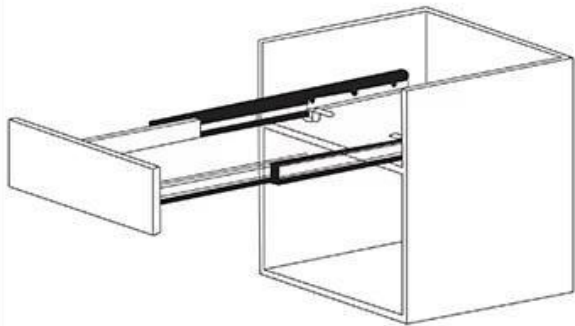

1. Align the Upper Wood Screw on the Side Plate by Itself
2. Follow the Schematic Diagram.

Installation.3

### Schematic Diagram of Countertop Installation

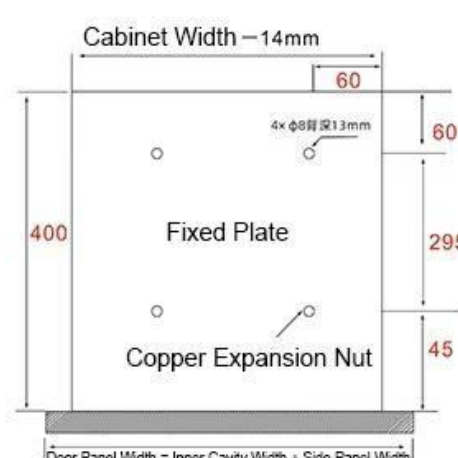

Cabinet Width - 14mm

60

400

60

295

45


Fixed Plate

Copper Expansion Nut

4x  $\phi 8$  深度 13mm

Door Panel Width = Inner Cavity Width + Side Panel Width

1. After the Pre-Drilled Holes Are Drilled on the Fixing Plate, Knock in the Blast Nuts.

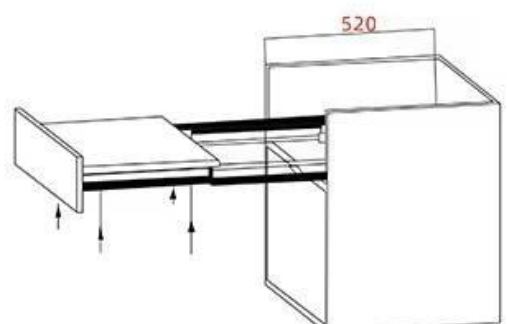


520

2. Lock the Fixed Plate on the Guide Rail with Screws

3. The Fixed Plate Is Installed

Installation.4

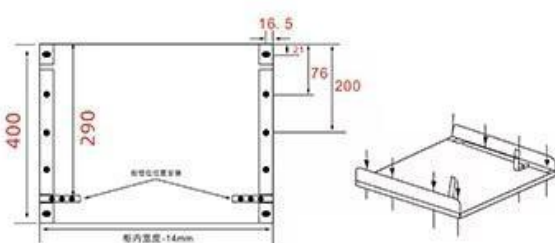

400

290

16.5


76

200

1. Mount the Wooden Screws on the Moving Plate According to the Drawing Size.

2. Install the Track Iron Sheet and Baffle.


Installation.5

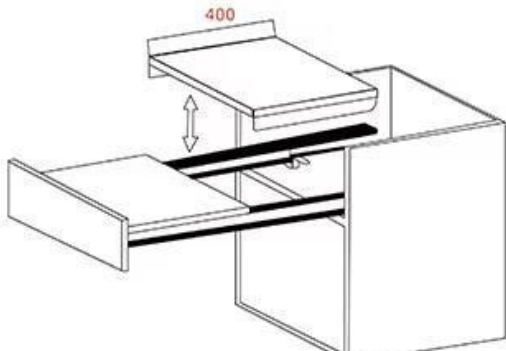

400

1. Align the Position and Assemble.


Installation.6

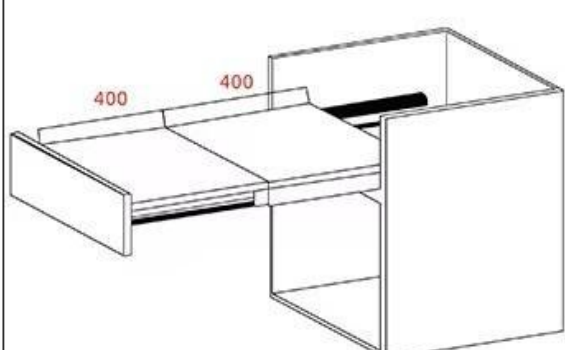

400

400

Installation.7

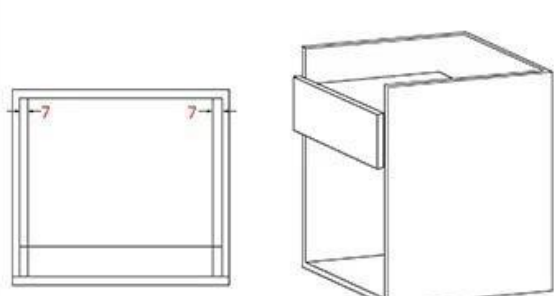

7

7

1. The Width of the Table Is 14mm Smaller Than the Width of the Cabinet.

Installation.8